
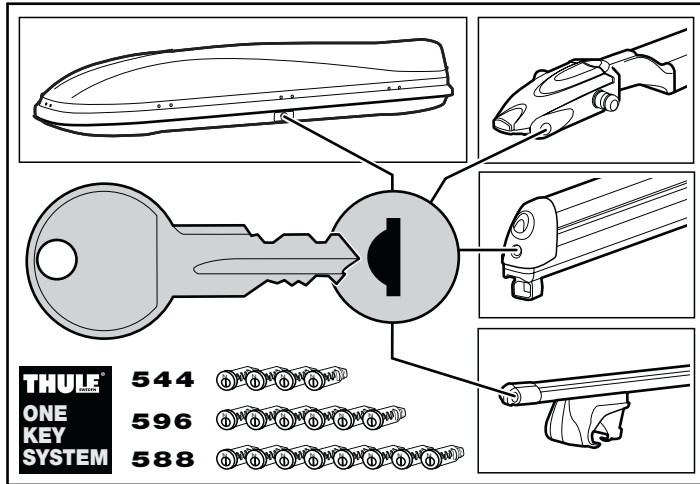
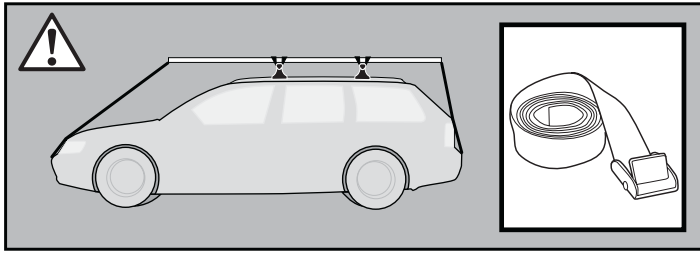
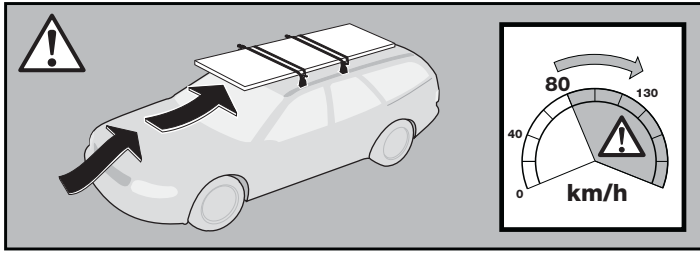


THULE®

SWEDEN

- GB Fitting instructions
- D Montageanleitung
- F Instructions de montage
- NL Montage-instructies
- I Istruzioni per il montaggio
- E Instrucciones de montaje
- PT Instruções de Montagem
- S Monteringsanvisning
- FIN Asennusohje
- EST Paigaldusjuhend
- LAT Stiprināšanas instrukcija
- LIT Pritvirtinimo instrukcijos
- PL Instrukcja montażu
- RU Инструкции по установке
- CZ Návod na montáž
- SK Návod na montáž
- SLO Navodila za pritrjevanje
- HR Uputa za sastavljanje
- HU A felszerelés módja
- GR Οδηγίες συναρμολόγησης
- TR Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

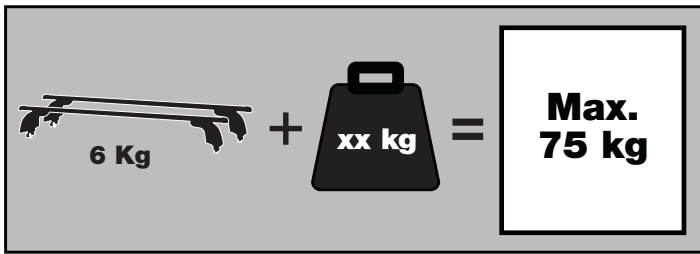

VW Caddy, 4/5-dr Van, 04-
VW Caddy, 4/5-dr Estate, 04-

RAPID FIXPOINT XT

3022
133022









Follow me...

@ info@thule.com










www.thule.com
www.thuleprofessional.com







Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN

646•3DF/8F/501-3022-02

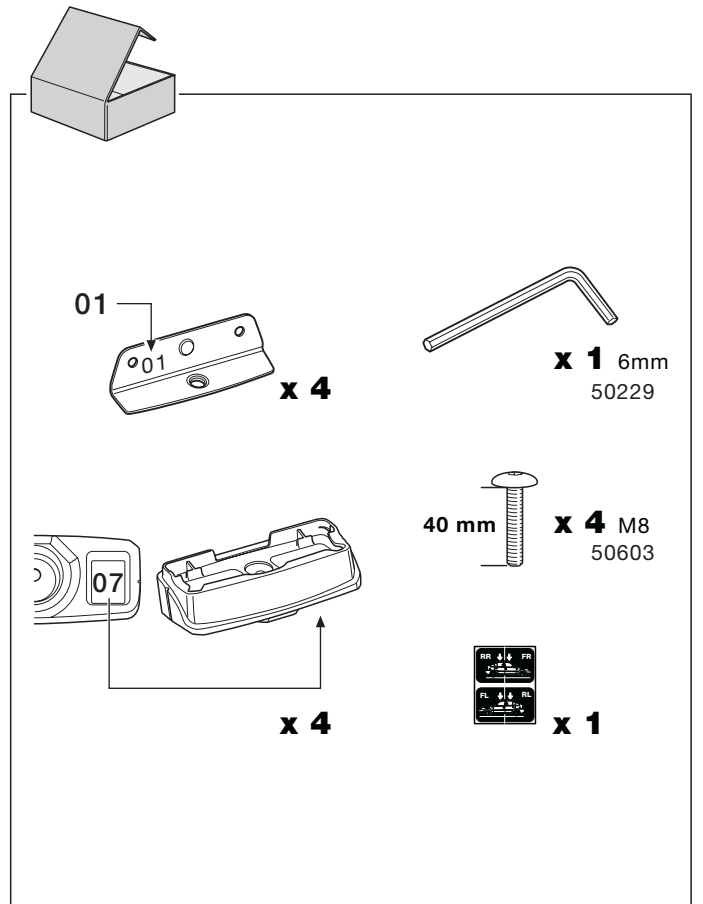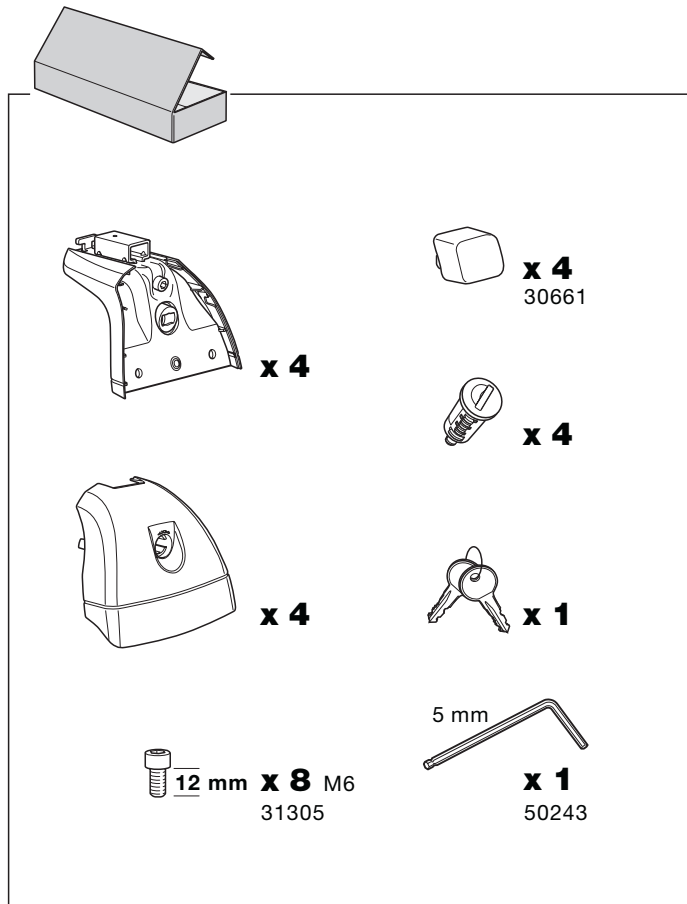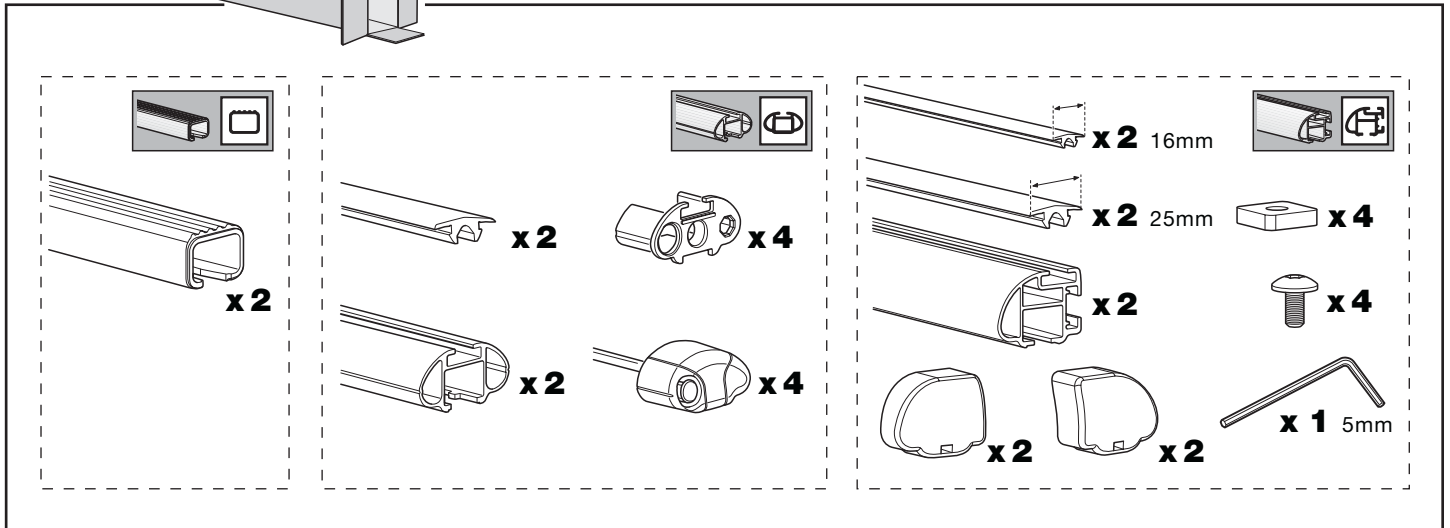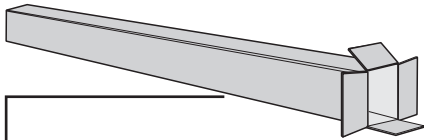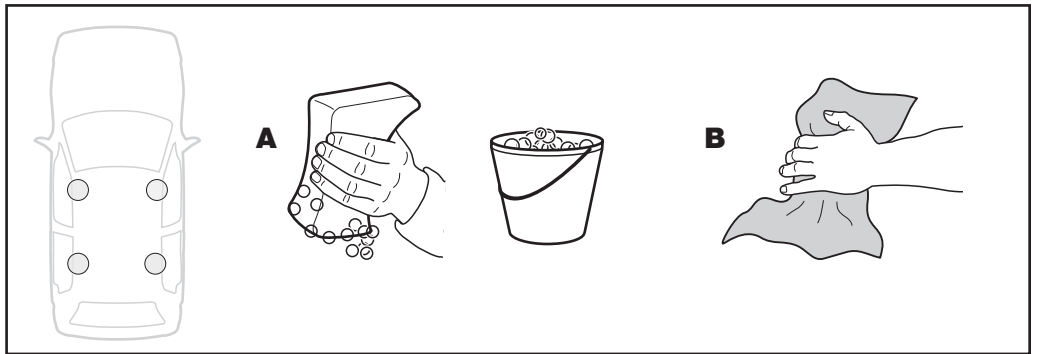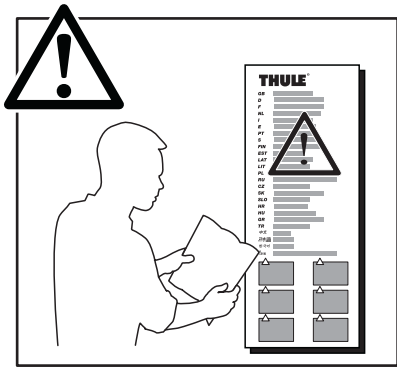

1

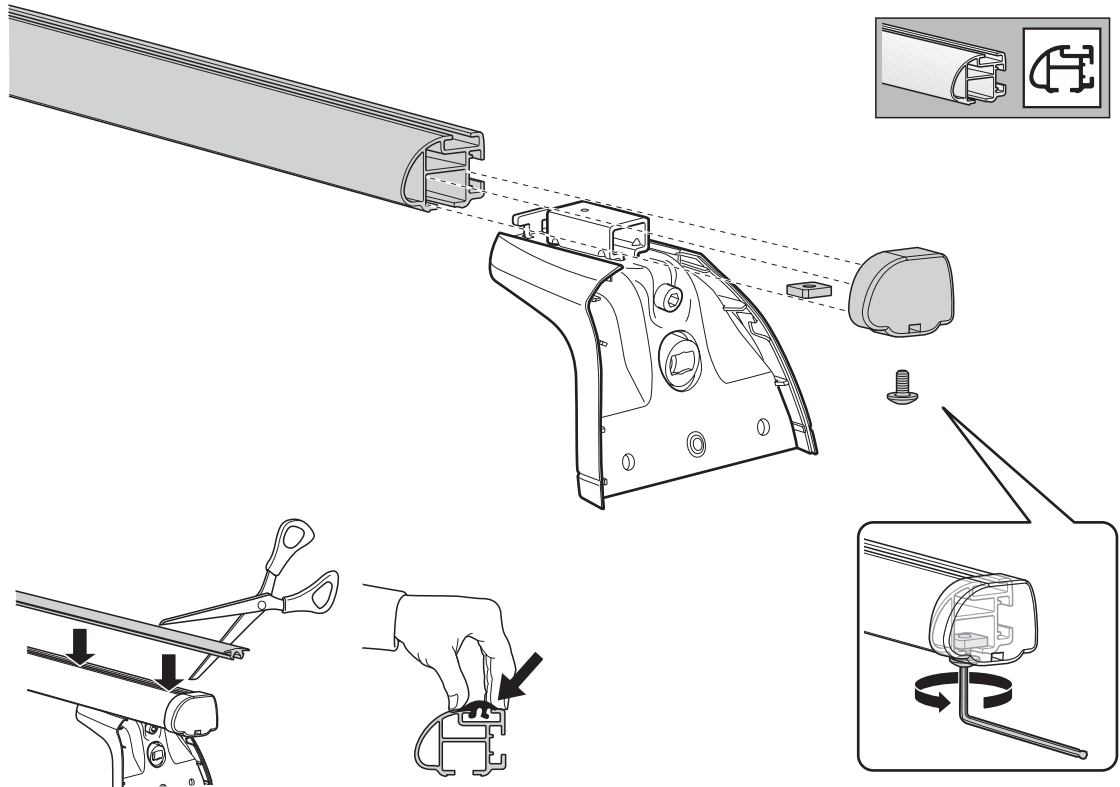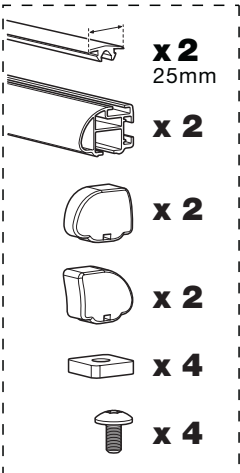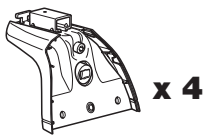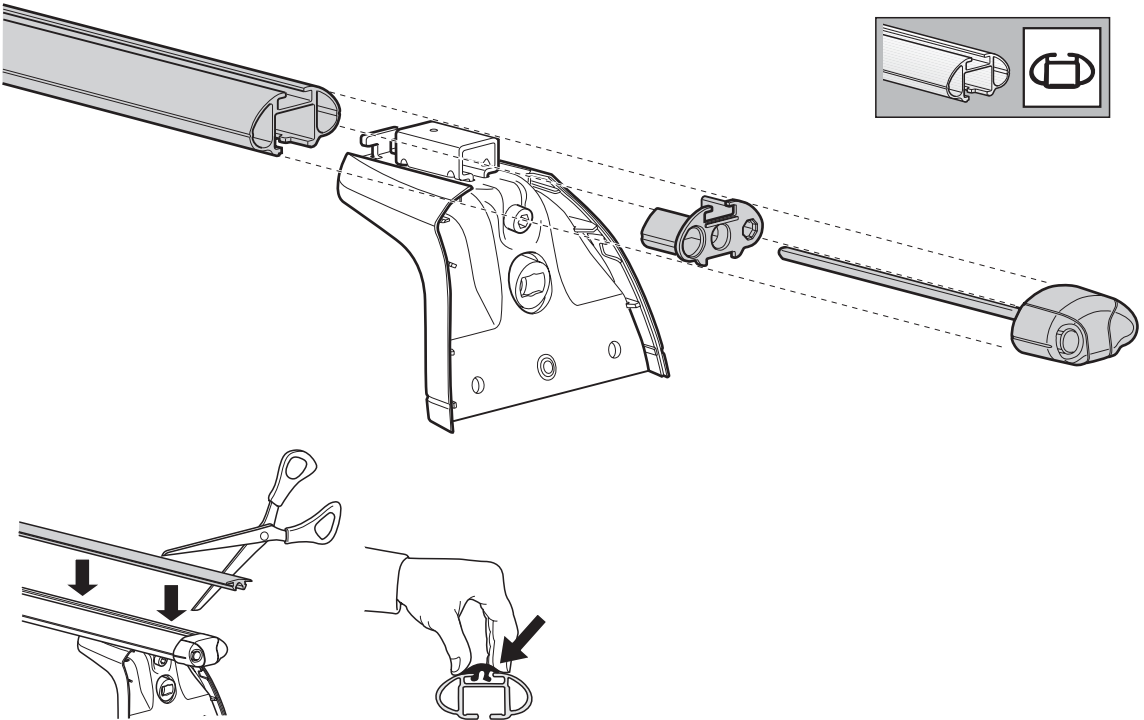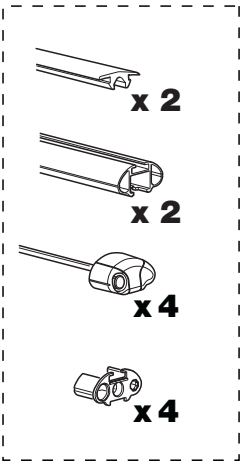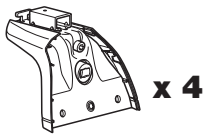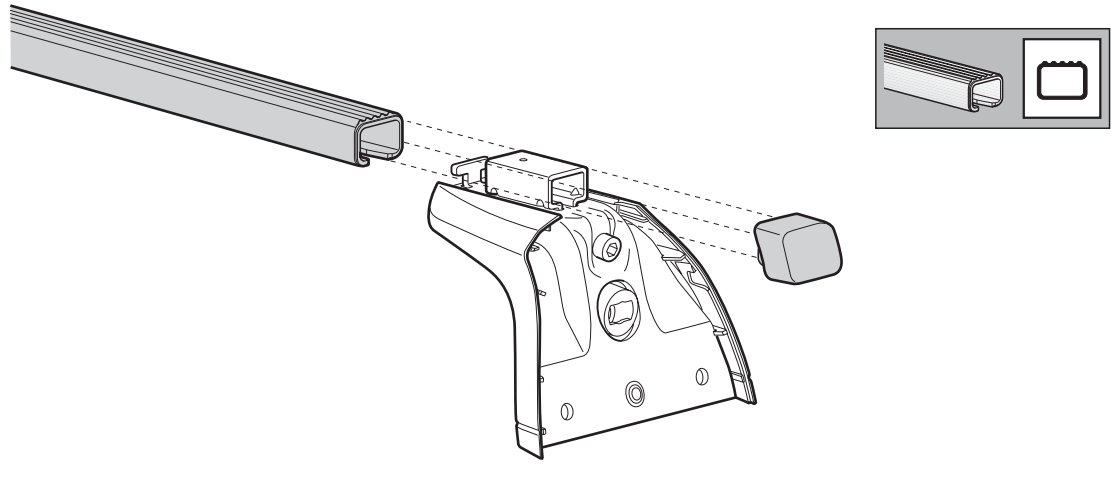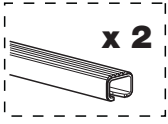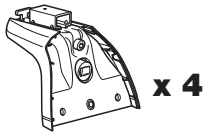


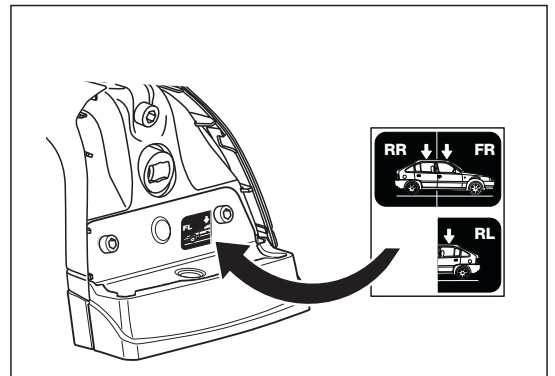
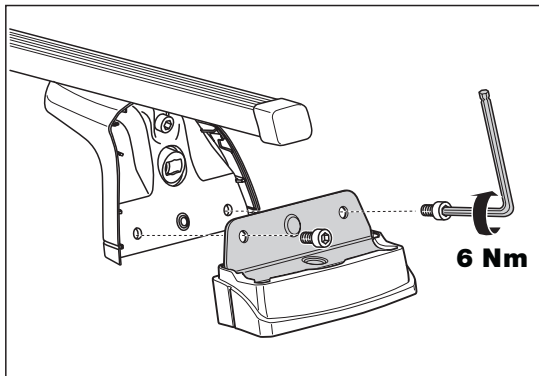
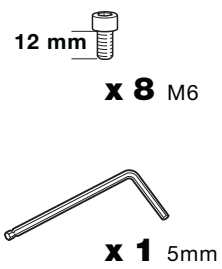
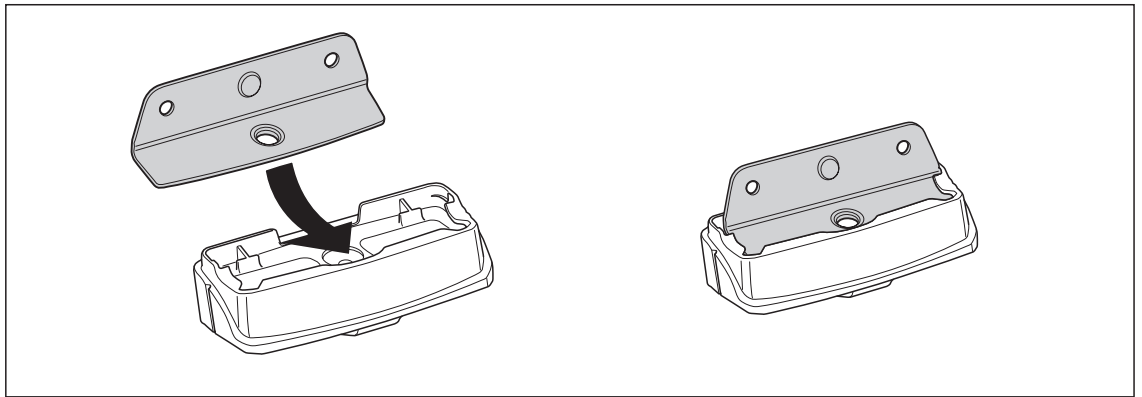
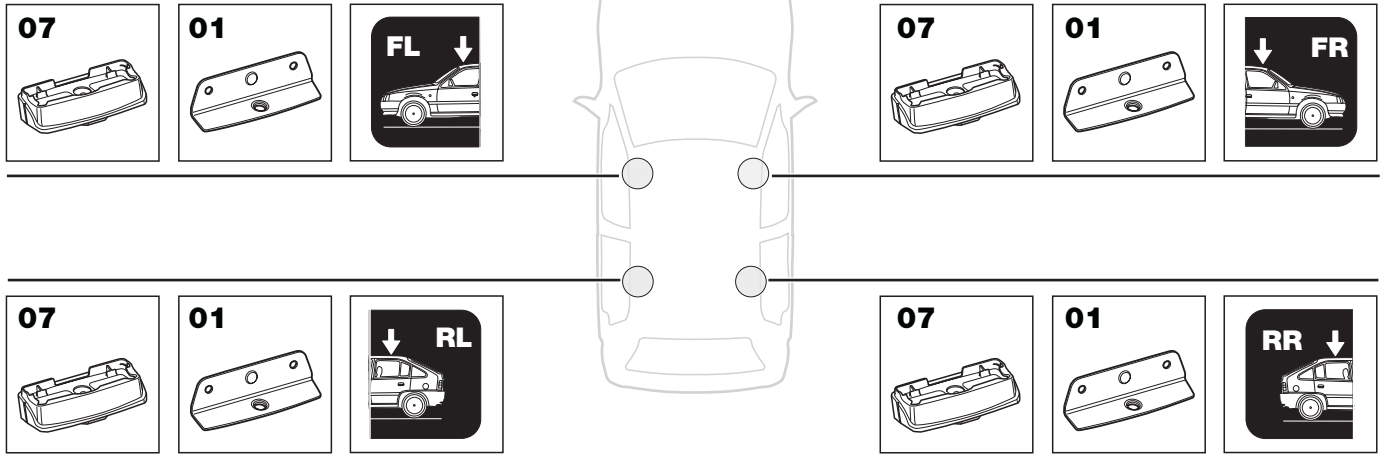
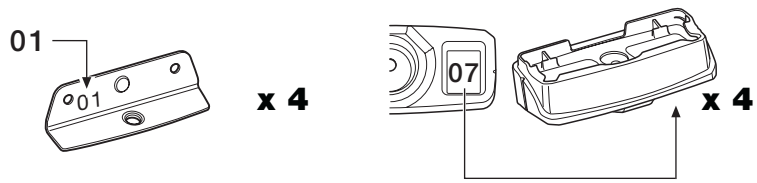


3

40 mm **x 4** M8

x 1 5mm

x 1 6mm

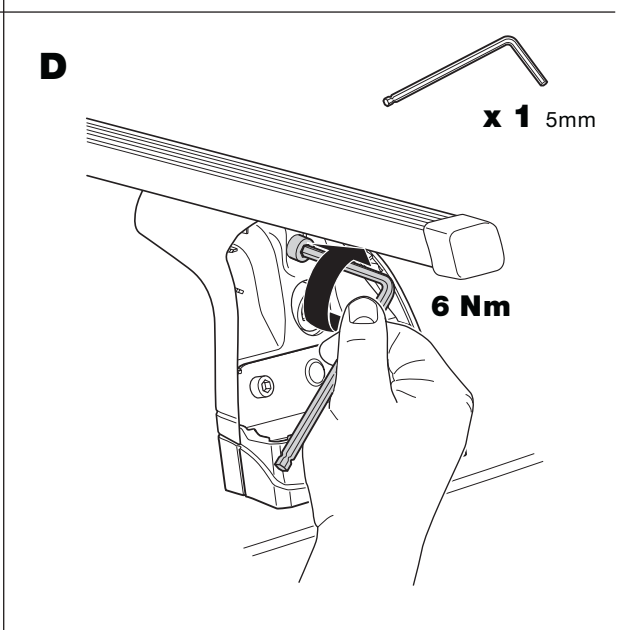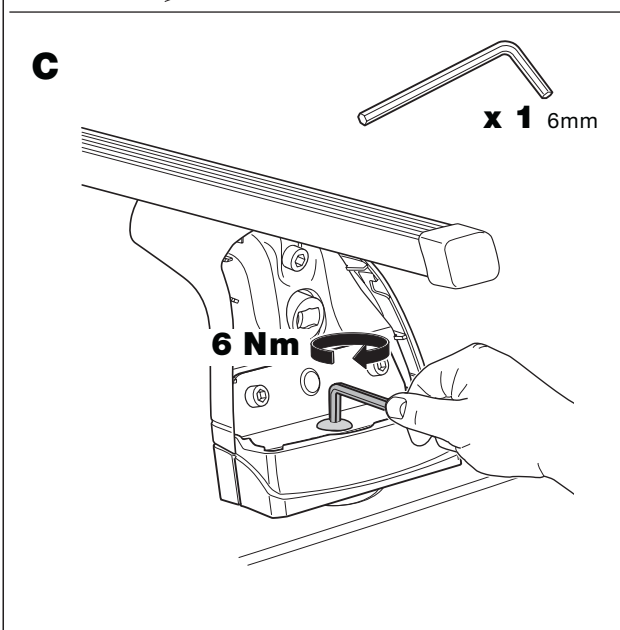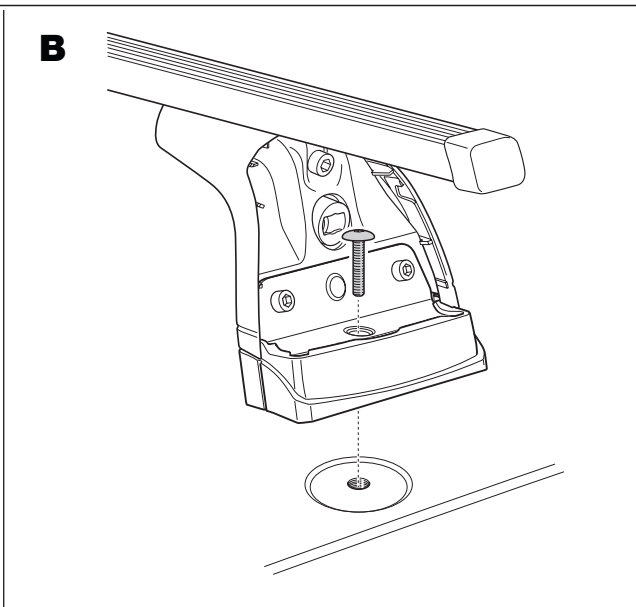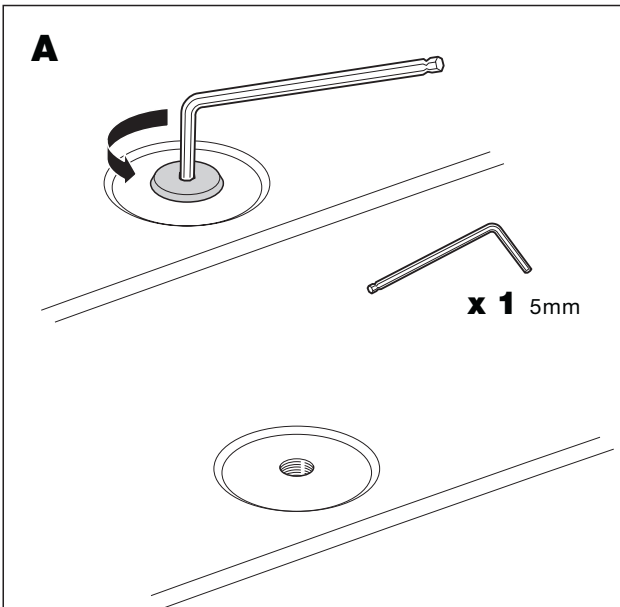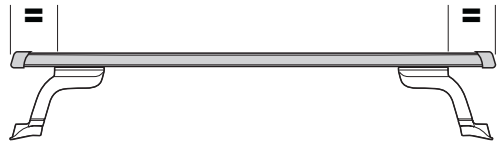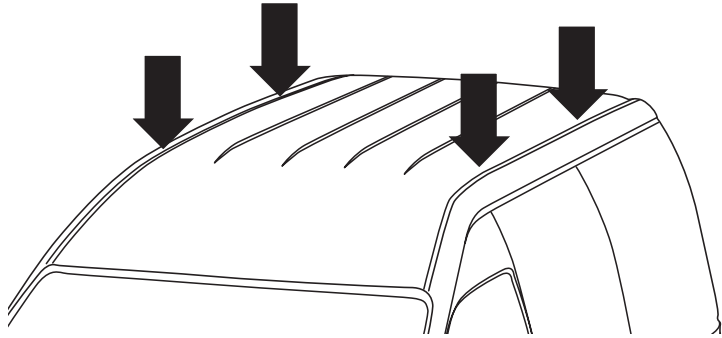

4




x 4



x 4



x 1

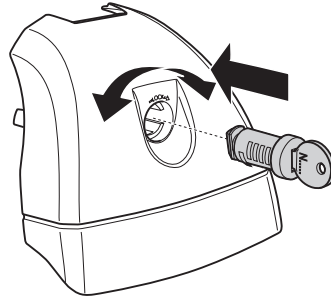




5



x 1 5mm



x 4

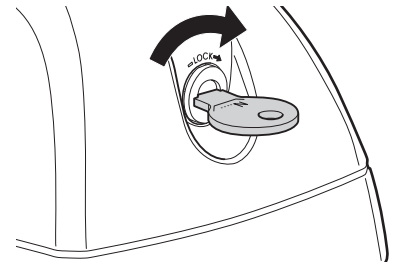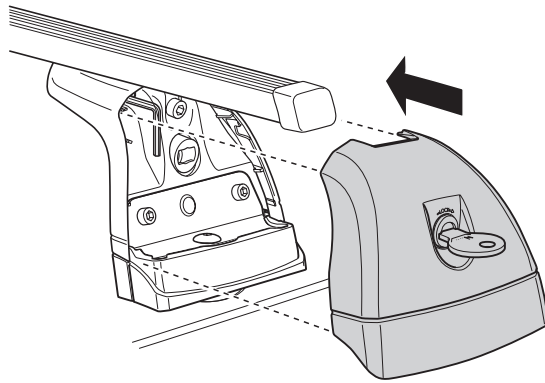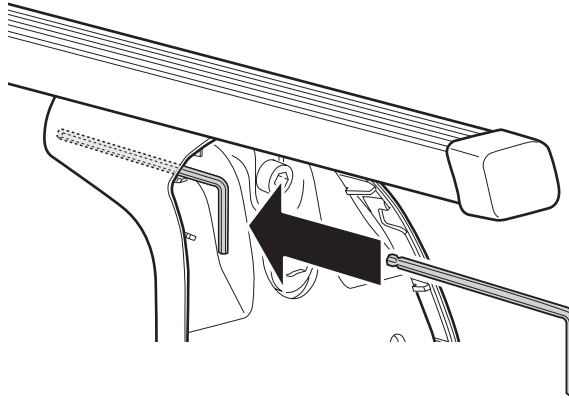

6

